



# MODEL RAILWAYS

[Home](#) [Shop](#) [News](#) [DCC Articles](#) [Stockists](#) [Maintenance](#) [FAQ's](#) [Contact](#)

[Links](#)

[Home Page](#)

## Voyager lubrication




# Oiling Instructions for the Dapol Voyager and Super Voyager


Under normal circumstances your Super Voyager should not need lubrication, however if it does, or you would like to lubricate your Voyager these instructions are the same for both, and supplement, but do not replace, the lubrication diagram that came with your model.

Firstly remove the body of the driving car by carefully unclipping it from its 'snug fit' in the chassis.

Then doing 1 end at a time, remove the chassis weights which are screwed into position by 2 small crosshead screws.

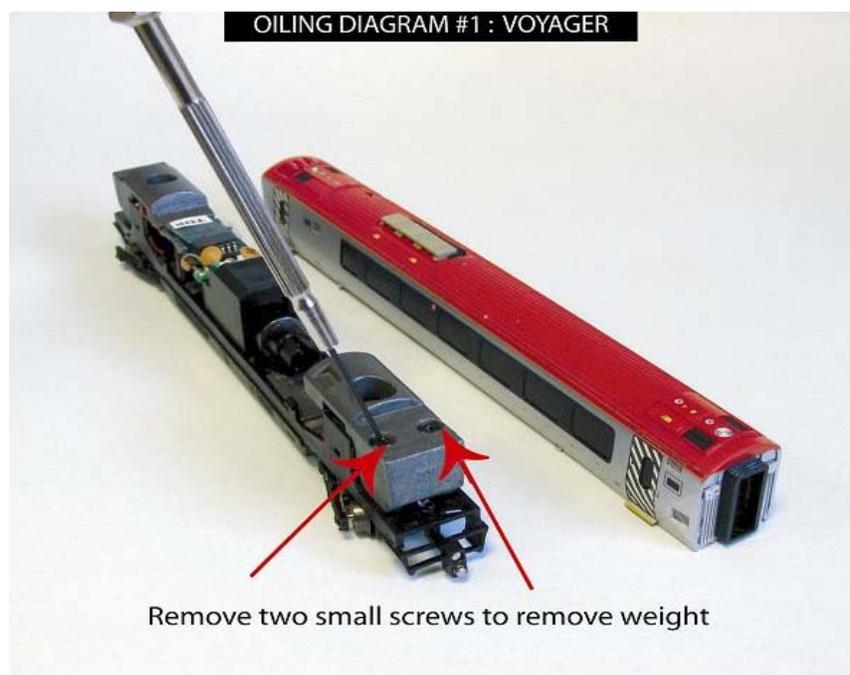

Once the weight is removed you can see the exposed top gear in the bogie tower. Both this and the silver pin need to be lubricated to aid dispersion of the transit grease that the model comes with, or indeed just to lubricate the harder to get at areas.

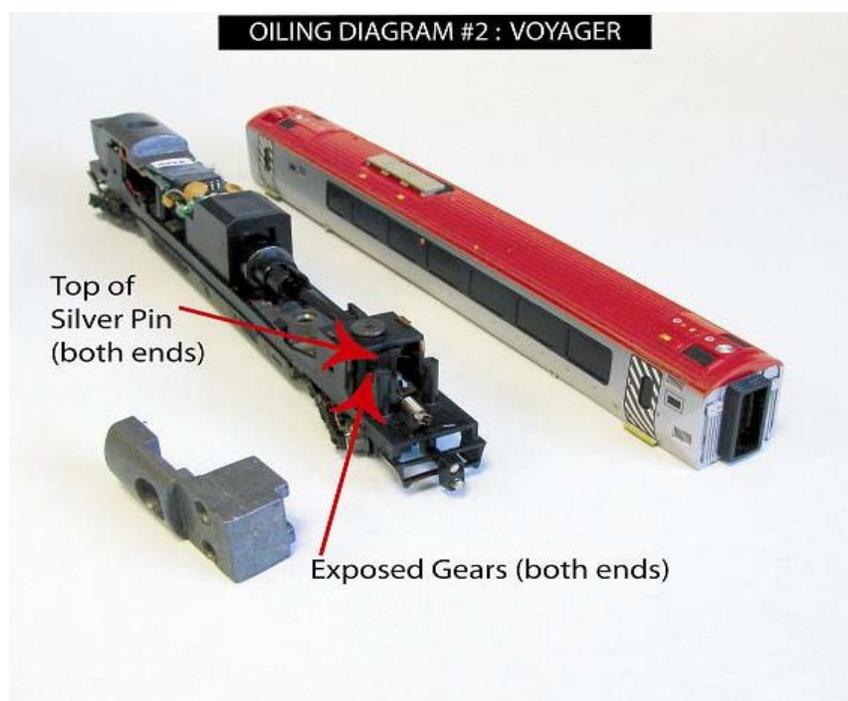

Once you have lubricated this end of the motorised unit, replace the weight and screw down firmly. then do exactly the same with the other end.

Replace the body and run for 5 minutes in each direction to ensure adequate lubrication through the whole drive mechanism.

If you require an 'out of warranty' repair or service for this locomotive, please forward it to our official service agent, BR Lines.

BR Lines

97 Park Lane

Guisborough

Cleveland

TS14 6PA